

Telefoner der understøtter dit Mobile Pollental

Nokia	1680 Classic
Nokia	2630
Nokia	2660
Nokia	2760
Nokia	2855
Nokia	2855i
Nokia	2865
Nokia	2865i
Nokia	3109c
Nokia	3110
Nokia	3110c
Nokia	3152
Nokia	3155
Nokia	3155i
Nokia	3250
Nokia	3500
Nokia	5200
Nokia	5300
Nokia	5310
Nokia	5310 XpressMusic
Nokia	5500
Nokia	5610
Nokia	5610 XpressMusic
Nokia	5700
Nokia	5700_XpressMusic

Nokia	6085
Nokia	6086
Nokia	6110
Nokia	6110 Navigator
Nokia	6110_Navigator
Nokia	6111
Nokia	6120
Nokia	6120_classic
Nokia	6121
Nokia	6125
Nokia	6126
Nokia	6131
Nokia	6131 NFC
Nokia	6131_NFC
Nokia	6133/6133r
Nokia	6135
Nokia	6136
Nokia	6151
Nokia	6152
Nokia	6155
Nokia	6155i
Nokia	6165
Nokia	6165i
Nokia	6170
Nokia	6233
Nokia	6234

Nokia	6235
Nokia	6235i
Nokia	6255
Nokia	6255i
Nokia	6256i
Nokia	6260
Nokia	6263
Nokia	6265
Nokia	6265i
Nokia	6267
Nokia	6270
Nokia	6275
Nokia	6275i
Nokia	6280
Nokia	6282
Nokia	6288
Nokia	6290
Nokia	6300
Nokia	6301
Nokia	6500
Nokia	6500s
Nokia	6555
Nokia	6600
Nokia	6620
Nokia	6630
Nokia	6638

Nokia	6660
Nokia	6670
Nokia	6680
Nokia	6680i
Nokia	6681
Nokia	6682
Nokia	7270
Nokia	7370
Nokia	7373
Nokia	7390
Nokia	7500
Nokia	7610
Nokia	7700
Nokia	7710
Nokia	7900
Nokia	8600
Nokia	8800 Arte
Nokia	8800 Sirocco
Nokia	8800_Sirocco_Edition
Nokia	9110
Nokia	9210
Nokia	9210c
Nokia	9210i
Nokia	9290
Nokia	9300
Nokia	9300i

Nokia	9500
Nokia	E50
Nokia	E51
Nokia	E60
Nokia	E61
Nokia	E61i
Nokia	E62
Nokia	E65
Nokia	E66-1
Nokia	E70
Nokia	E90
Nokia	E90_Communicator
Nokia	MX380
Nokia	N3250
Nokia	N70
Nokia	N71
Nokia	N72
Nokia	N73
Nokia	N73-2
Nokia	N75
Nokia	N76
Nokia	N77
Nokia	N78
Nokia	N80
Nokia	N81
Nokia	N81_8GB

Nokia	N82
Nokia	N85
Nokia	N90
Nokia	N91
Nokia	N91_8GB
Nokia	N92
Nokia	N93
Nokia	N93i
Nokia	N95
Nokia	N95 (North America)
Nokia	N95, 8GB
Nokia	N95_8GB
Nokia	N96
Nokia	Nokia 80
Nokia	Nokia N95, 8GB
Pantech	PT-G600
SAMSUNG	
SAMSUNG	MM-A900
SAMSUNG	SGH-D500
SAMSUNG	SGH-D520
SAMSUNG	SGH-D600
SAMSUNG	SGH-D600E
SAMSUNG	SGH-D608
SAMSUNG	SGH-D800
SAMSUNG	SGH-D820
SAMSUNG	SGH-D828

SAMSUNG	SGH-D840
SAMSUNG	SGH-D900
SAMSUNG	SGH-D900 (Orange)
SAMSUNG	SGH-D900 (Voda)
SAMSUNG	SGH-D900i
SAMSUNG	SGH-D908
SAMSUNG	SGH-E200
SAMSUNG	SGH-E210
SAMSUNG	SGH-E250
SAMSUNG	SGH-E340
SAMSUNG	SGH-E350
SAMSUNG	SGH-E360
SAMSUNG	SGH-E370
SAMSUNG	SGH-E380
SAMSUNG	SGH-E388
SAMSUNG	SGH-E390
SAMSUNG	SGH-E490
SAMSUNG	SGH-E500
SAMSUNG	SGH-E530
SAMSUNG	SGH-E570
SAMSUNG	SGH-E720
SAMSUNG	SGH-E730
SAMSUNG	SGH-E740
SAMSUNG	SGH-E760
SAMSUNG	SGH-E770
SAMSUNG	SGH-E780

SAMSUNG	SGH-E788
SAMSUNG	SGH-E790
SAMSUNG	SGH-E810
SAMSUNG	SGH-E830
SAMSUNG	SGH-E840
SAMSUNG	SGH-E870
SAMSUNG	SGH-E898
SAMSUNG	SGH-E900
SAMSUNG	SGH-F500
SAMSUNG	SGH-G600
SAMSUNG	SGH-i450
SAMSUNG	SGH-J600
SAMSUNG	SGH-P200
SAMSUNG	SGH-P260
SAMSUNG	SGHP300
SAMSUNG	SGH-P310
SAMSUNG	SGH-P858
SAMSUNG	SGH-P900
SAMSUNG	SGH-P910
SAMSUNG	SGH-T509
SAMSUNG	SGH-T539
SAMSUNG	SGH-T619
SAMSUNG	SGH-T709
SAMSUNG	SGH-T809
SAMSUNG	SGH-U100
SAMSUNG	SGH-U600

SAMSUNG	SGH-U700
SAMSUNG	SGH-X670
SAMSUNG	SGH-X700
SAMSUNG	SGH-X708
SAMSUNG	SGH-X820
SAMSUNG	SGH-Z130
SAMSUNG	SGH-Z140
SAMSUNG	SGH-Z150
SAMSUNG	SGH-Z230
SAMSUNG	SGH-Z240
SAMSUNG	SGH-Z310
SAMSUNG	SGH-Z400
SAMSUNG	SGH-Z400V
SAMSUNG	SGH-Z500
SAMSUNG	SGH-Z540
SAMSUNG	SGH-Z560
SAMSUNG	SGH-Z720
SAMSUNG	SGH-ZV40
SAMSUNG	SGH-ZV50
SAMSUNG	SPH-A900
SAMSUNG	SPH-I600
SAMSUNG	Z100
SAMSUNG	Z105
SAMSUNG	Z107
SonyEricsson	C905
SonyEricsson	D750i

SonyEricsson F500
SonyEricsson F500i
SonyEricsson F508i
SonyEricsson J300
SonyEricsson J300a
SonyEricsson J300c
SonyEricsson J300i
SonyEricsson K300
SonyEricsson K300a
SonyEricsson K300c
SonyEricsson K300i
SonyEricsson K310
SonyEricsson K310a
SonyEricsson K310c
SonyEricsson K310i
SonyEricsson K320
SonyEricsson K320i
SonyEricsson K500
SonyEricsson K500c
SonyEricsson K500i
SonyEricsson K506c
SonyEricsson K508
SonyEricsson K508c
SonyEricsson K508i
SonyEricsson K510
SonyEricsson K510a

SonyEricsson K510c
SonyEricsson K510i
SonyEricsson K530i
SonyEricsson K550i
SonyEricsson K550im
SonyEricsson K600
SonyEricsson K600i
SonyEricsson K608
SonyEricsson K608i
SonyEricsson K610
SonyEricsson K610c
SonyEricsson K610i
SonyEricsson K610im
SonyEricsson K610iv
SonyEricsson K630
SonyEricsson K660i
SonyEricsson K700
SonyEricsson K700c
SonyEricsson K700i
SonyEricsson K750
SonyEricsson K750c
SonyEricsson K750i
SonyEricsson K770i
SonyEricsson K770iv
SonyEricsson K790a
SonyEricsson K790c

SonyEricsson K790i
SonyEricsson K800
SonyEricsson K800c
SonyEricsson K800i
SonyEricsson K800iv
SonyEricsson K810c
SonyEricsson K810i
SonyEricsson K850
SonyEricsson K850i
SonyEricsson M600
SonyEricsson M600c
SonyEricsson M600i
SonyEricsson M608
SonyEricsson Mylo
SonyEricsson P1
SonyEricsson P1i
SonyEricsson P900
SonyEricsson P900R101
SonyEricsson P908
SonyEricsson P910
SonyEricsson P910a
SonyEricsson P910c
SonyEricsson P910i
SonyEricsson P990
SonyEricsson P990c
SonyEricsson P990i

SonyEricsson R300
SonyEricsson R306
SonyEricsson S500
SonyEricsson S500i
SonyEricsson S600i
SonyEricsson S700
SonyEricsson S700c
SonyEricsson S700i
SonyEricsson S710
SonyEricsson Sony-Ericsson-F500i
SonyEricsson T303
SonyEricsson T650i
SonyEricsson V600i
SonyEricsson V640
SonyEricsson V800
SonyEricsson V802
SonyEricsson W200i
SonyEricsson W200iv
SonyEricsson W300
SonyEricsson W300c
SonyEricsson W300i
SonyEricsson W350
SonyEricsson W380i
SonyEricsson W550i
SonyEricsson W580
SonyEricsson W580i

SonyEricsson W600i
SonyEricsson W700
SonyEricsson W700c
SonyEricsson W700i
SonyEricsson W710
SonyEricsson W710c
SonyEricsson W710i
SonyEricsson W760
SonyEricsson W800
SonyEricsson W800c
SonyEricsson W800i
SonyEricsson W810
SonyEricsson W810a
SonyEricsson W810c
SonyEricsson W810i
SonyEricsson W830
SonyEricsson W830i
SonyEricsson W850
SonyEricsson W850i
SonyEricsson W850iv
SonyEricsson W880
SonyEricsson W880i
SonyEricsson W880iv
SonyEricsson W888
SonyEricsson W890
SonyEricsson W890i

SonyEricsson W900
SonyEricsson W900_emu
SonyEricsson W900i
SonyEricsson W902
SonyEricsson W910i
SonyEricsson W950
SonyEricsson W950c
SonyEricsson W950i
SonyEricsson W960i
SonyEricsson Z250
SonyEricsson Z300i
SonyEricsson Z310
SonyEricsson Z310a
SonyEricsson Z310i
SonyEricsson Z320
SonyEricsson Z500
SonyEricsson Z500a
SonyEricsson Z500i
SonyEricsson Z520
SonyEricsson Z520a
SonyEricsson Z520c
SonyEricsson Z520i
SonyEricsson Z525
SonyEricsson Z525a
SonyEricsson Z525c
SonyEricsson Z525i

SonyEricsson Z530c

SonyEricsson Z530i

SonyEricsson Z550

SonyEricsson Z550a

SonyEricsson Z550c

SonyEricsson Z550i

SonyEricsson Z555

SonyEricsson Z558

SonyEricsson Z710

SonyEricsson Z710c

SonyEricsson Z710i

SonyEricsson Z750

SonyEricsson Z800

SonyEricsson Z800c

SonyEricsson Z800i